

### Proprietary Information

The information in this guide is intended to be used as a reference to parts and their locations to aid the owner, operator, and mechanic using this piece of equipment. This document in any form is not to be copied, sold, or used as an engineering document to construct, modify, or design any such equipment. All information and drawings herein belong exclusively to Curry Supply Company and may not be duplicated in any way without prior written consent from Curry Supply Company

### Disclaimer

The information in this guide may not reflect the full configuration of your vehicle. The parts displayed are for general reference and any "custom" additions may not be fully shown.



**YOUR JOBS.**  
**OUR TRUCKS.**



# **CRASH** **ATTENUATOR**

## **OPERATIONS GUIDE**

DOCUMENT NUMBER 014-003

**STOP!**

You must read this document before attempting to operate this vehicle. Failure to do so may void your warranty and can result in serious injury or death.

**PARTS**

800.567.5127

**WARRANTY/SERVICE**

800.345.2829

1477 Degol Industrial Drive  
Hollidaysburg, PA 16648


service@currysupply.com • CurrySupply.com

## DEPLOYING THE ATTENUATOR

1. Ensure that both the area above and around the vehicle is clear and safe, set the parking break, and start the engine.

2. Using the attenuator controller, push and hold the "DOWN" button. The attenuator will unfold and the arrow board (if installed) will rise. Continue to hold the button until the sign is in the full upright position.

3. If the vehicle is in the desired location, apply the Dualock for added support in case of a motor vehicle collision.

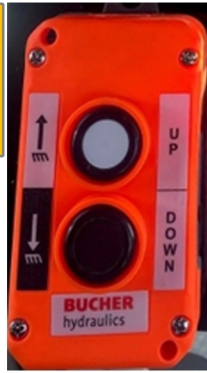

## STOWING THE ATTENUATOR

1. Ensure that both the area above and around the vehicle is clear and safe.

2. Turn off the display if it is still in use.

3. Using the attenuator controller, press and hold in the "UP" button. The arrow board will lower and the attenuator will raise and fold up into the stowed position.


**\*hold for an additional two seconds to ensure that it is fully stowed.**

4. If the vehicle is to be transported, ensure that the drop jacks are fully retracted and pinned. and that the swivel jackes are fully retracted and rotated to the stored and locked position..

5. Release the Duralock/Micolock if engaged.

## ARROW BOARD CONTROLS


1. Open the arrow board control box located inside of the cab area.

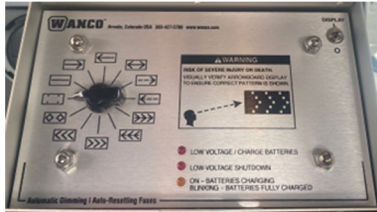

2. To turn on the arrow board, toggle the "DISPLAY" switch in the upper right corner to "I". The arrow board will now be displaying the pattern selected on the dial.



3. To change the arrow pattern, use the dial on the left of the control board to select a new pattern.

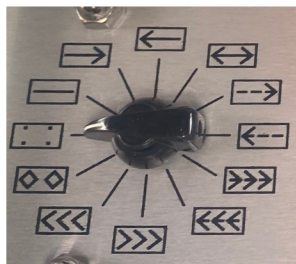

**\*Improper display could cause a traffic accident. Visually inspect the arrow board is displaying the correct pattern.**

4. To turn off the arrow board, toggle the display switch to "O". Visually inspect that arrow board is off.

## WORK LIGHTS

If Installed, strobe, flood, and flood lights can be activated by using the dash board switches.



To turn these on, select the desired switch, and toggle it UP to the ON position.

To turn the lights off, toggle the switch DOWN.



**YOUR JOBS.  
OUR TRUCKS.**