


Winch Truck Schematics

[Air & Wiring Schematic SCH1-1](#)

[Page 2](#)

[Control Lever Schematic SCH2-1](#)

[Page 3](#)

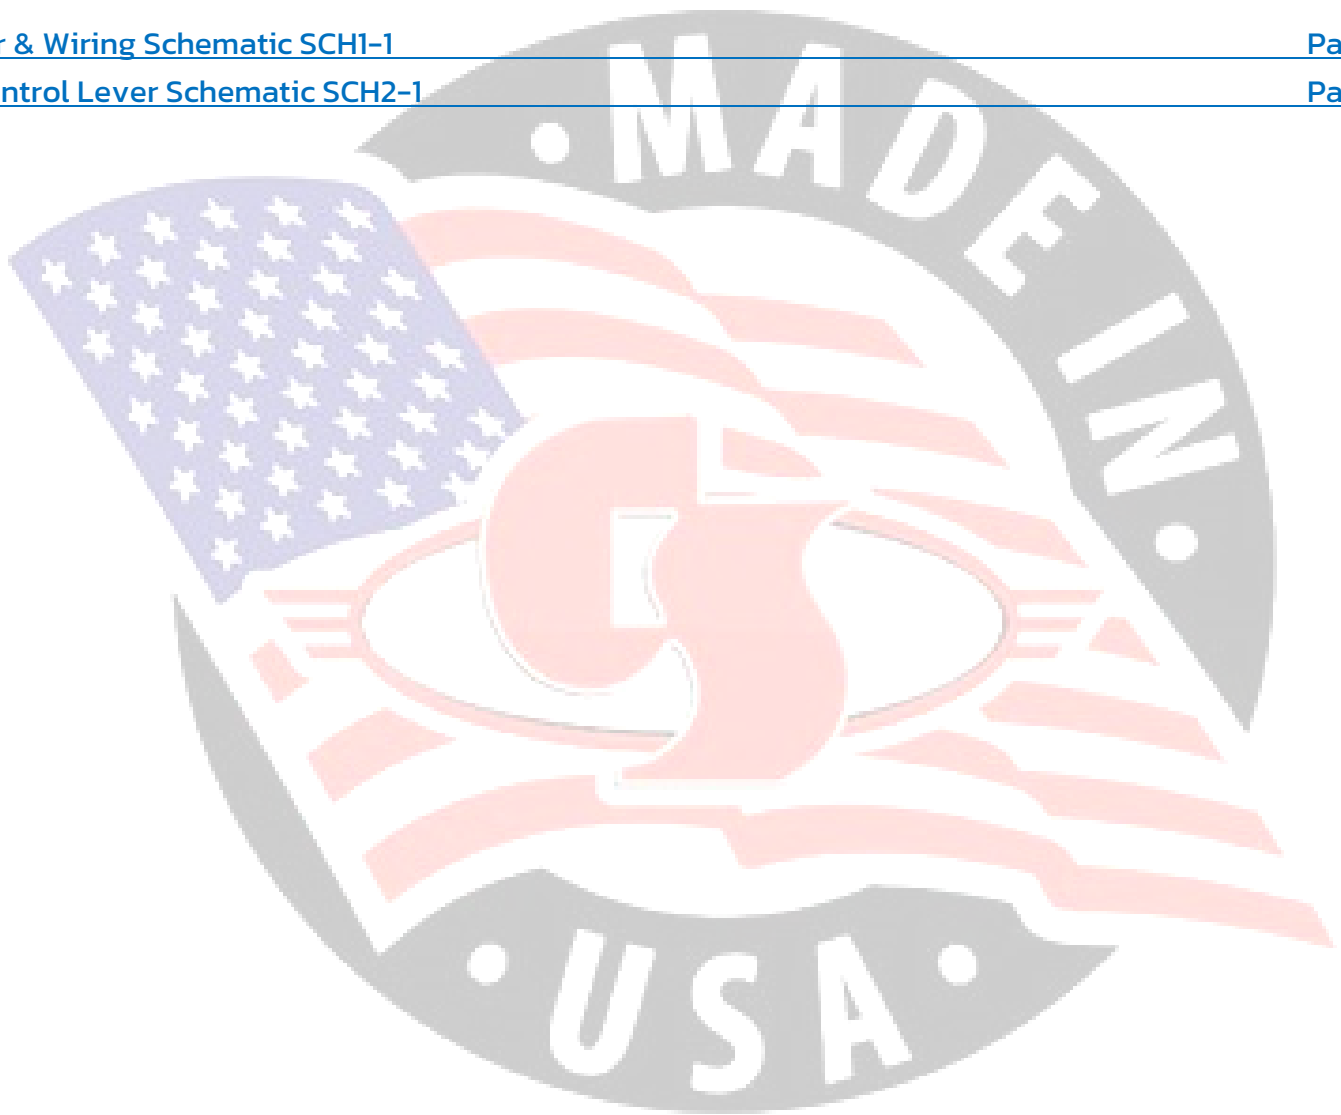

Air Schematic

Description	Port	Function
PTO	1	Air Supply
	2	PTO Disengage
	4	PTO Engage
Dog (push/pull)	P	Air Supply
	A	Dog Out tee press switch
	B	1/8" Plug
Winch (lever)	P	Air Supply
	A	Winch Out
	B	Winch In
Brake (lever)	Inlet	Air Supply
	Outlet	Brake

Wiring Schematics

