CAUTION

PLEASE CONTACT CURRY
SUPPLY COMPANY BEFORE
ATTEMPTING ANY CHANGES TO
THE ELECTRICAL SYSTEMS.
DOING SO MAY CAUSE
EQUIPMENT DAMAGE OR VOID
WARRANTY.

Table of Contents

Air Schematic	
Hydraulic Schematic	

Air Schematic Description Port Function Air Supply PTO PTO Disengage PTO Engage Dog (push/pull) P Air Supply Dog Out tee press switch A 1/8" Plug B Winch (lever) P Air Supply Winch Out A B Winch In Brake (lever) Inlet Air Supply Outlet Brake Wiring Schematics DOG OUTLIGHT PTO LIGHT HE/LO SWITCH **РИЕЗВИКЕ БИПТОН** G 140 WINCH MOTOR РТО ВООТ

